

How to adjust the shelves:



The climate cabinet can be equipped with different shelves. The most common shleves are the shelves below:

- The storage shelf
- The sliding shelf

The storage shelf is a shelf that is not sliding but rests on 4 brackets.

If the front brackets are mounted lower than the rear brackets, you can create an angled shelf that makes the labels nicely visible. It is also possible to remove that shelf, for example to place the bottles vertically (upright) on the shelf below (often done by the catering industry).

You can simply extend the extendable shelf, but it is not possible to place the shelf at an angle.

On the following pages we explain how to remove the shelves or place them in a different position.



Disassembling/Assembling of the storage shelf:

To disassemble:

Dismantle the shelf by removing the shelf (if it is fixed with a black strip - it is only fitted during transport so that it cannot come "loose" - simply remove this strip). Then push the brackets (4 pieces) upwards.



To assemble:

First check at which level you wish to mount the shelf. Then use a flat screwdriver to "open" the relevant holes (the elongated slots at the front) by pushing down with the screwdriver. Take a bracket and push it down (into two holes). After mounting the 4 brackets, place the shelf on to of it.

If the shelf is going to be placed horizontally, place the brackets at the same height (front and rear) and turn the shelf over (upright front edge is then directed downwards). This increases the capacity (i.e. quantity of bottles) on that shelf.

Hint 1: the storage shelf placed at an angle (at the top) can handle 6 + 5 (neck forward and "hanging" between the neck of the other bottles) bottles (0.75l). This shelf is slanted so that the labels are nicely visible - and to place the bottles that have not been completely drunk and can then rest for a while. You may have already seen it, but this sloping shelf can already handle 11 bottles (0.75l). On the first sliding shelf, you can also simply stack behind the slanted shelf to make optimal use of the capacities.

This platform can also be placed horizontally, so that bottles can be placed vertically (upright).


Sliding shelves: see next page



Disassembling/Assembling of the sliding shelf:

To disassemble:

Disassemble the shelf by unscrewing the 4 screws (bottom - cross) and remove the shelf. Then push the front of the railings up and then pull it towards you.

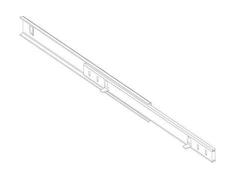

To assemble:

First check at which level you wish to mount the shelf. Then use a flat screwdriver to "open" the relevant holes (at the front down, largest hole, and at the back towards the back)

Take a railing (look carefully for which side it is - protrusion for the screws pointing downwards) and press it firmly in first at the back (push it back) and then at the front (push it down).

Then place the shelf (elevation at the front) on the railing and mount the platform using the 4 screws.

Hint 2: if you want to place many shelves below each other, it is easiest to start at the top and then work your way down (because of the limited space between the shelves for a screwdriver).

Hint 3: if you prefer a sliding shelf at the top, you can also exchange the storage shelf with the lower sliding shelf. You then have a sliding shelf at the top and a storage shelf at the bottom.

New shelf:

A new shelf is determined based on the position of the current shelves. That actually means that you have to take out a shelf (you will most likely do that anyway). You then use your current shelf, as it were, as a "mold".

Place the new shelf on your current shelf and mark the position where the screws should be placed. Tighten the screws a little bit, at the marking position, so that you have already created a small "hole" (it is easier if you later attach the shelf to the railing). Unscrew these screws and mount the railings as described above.